



### <CHASSIS> LUBRICATION POINTS

Use general purpose grease when not specified here.

Apply oil or grease to the other sliding surfaces not shown here.

#### CONTROL CABLE LUBRICATION

Periodically, disconnect the throttle, front brake and choke cables at their upper ends. Thoroughly lubricate the cables and their pivot points with a commercially available cable lubricant.

