

CARBURETOR CHOKE

Check for smooth choke knob operating friction. The choke knob must move smoothly and stay where positioned.

Adjust by turning the friction adjuster nut under the rubber cap.

Pull the choke knob all the way out and make sure the choke valve is closed by moving the carburetor choke lever.

Adjustment:



Remove the front cover (page 5-2).

Loosen the cable clamp and pull the cable casing up just so the choke valve is fully closed. Push the choke knob in and be sure the choke valve is fully open by checking for 1-2mm (1/16-1/8 in) cable slack.

Install the front cover.

AIR CLEANER

Remove the air cleaner cover cap nut and cover. Remove the air cleaner element nut and element.

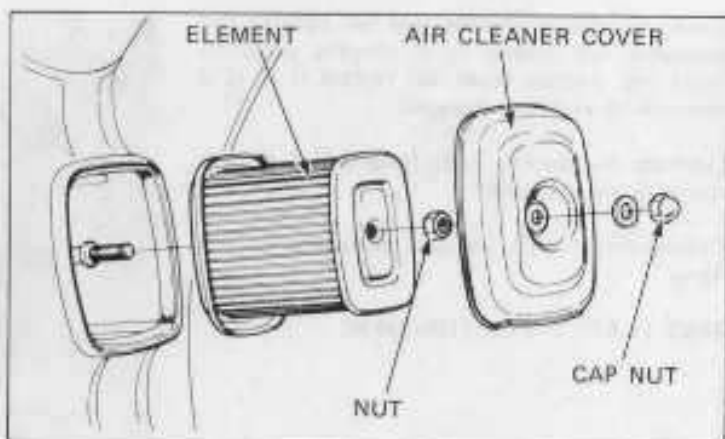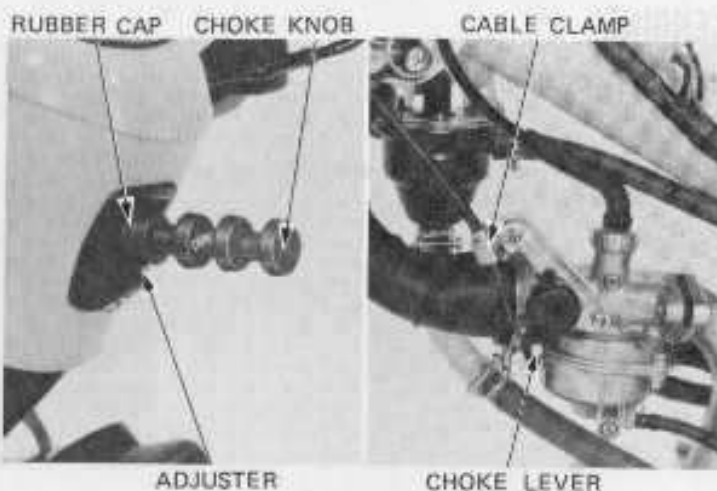

Clean the element by tapping it lightly to loosen dust. Blow away the remaining dust by applying compressed air from inside the element.

Replace the element if it is excessively dirty, torn or damaged.

Install the element and air cleaner cover.

