



If adjustment is necessary, turn the adjusting nut until the correct free play is obtained.

NOTE

Make sure the cut-out on the adjusting nut is seated on the brake arm pin after making the final free play adjustment.

BRAKE LINKAGE

Check the brake cable, brake rod, brake pedal and brake lever for loose connections, excessive play, or damage.

Replace or repair if necessary.



ADJUSTING NUT

BRAKE LIGHT SWITCH

NOTE


Perform this adjustment after adjusting brake pedal free play.

Adjust the brake light switch so that the brake light will light when the brake pedal is depressed and the brake begins engagement.

NOTE

- Do not turn the switch body.
- The front brake light switch does not require adjustment.

Adjust by turning the switch adjusting nut.

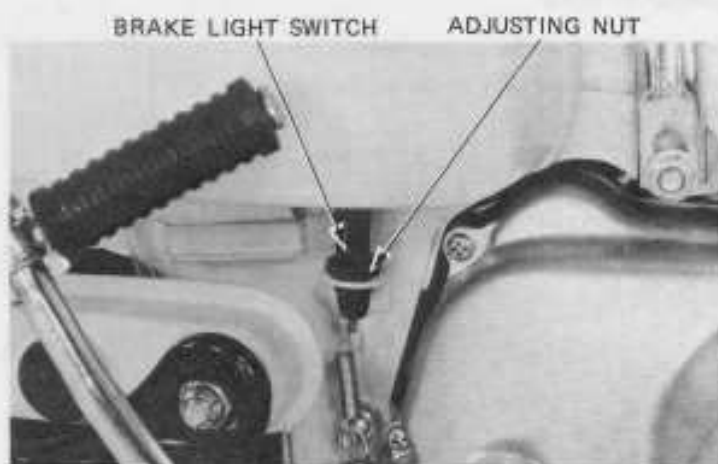

HEADLIGHT AIM

Adjust vertically by turning the vertical adjusting screw.

Turn the adjusting screw clockwise to direct the beam up.

Adjust horizontally by turning the horizontal adjusting screw.

Turn the adjusting screw clockwise to direct the beam toward the left side of the rider.

NOTE

Adjust the headlight beam as specified by local laws and regulations.

WARNING

An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.



VERTICAL ADJUSTING SCREW