



NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to correct torque values.

Check all cotter pins and safety clips.

WHEELS/SPOKES

NOTE

Tire pressure should be checked when tires are COLD.

RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		Front	Rear
Tire size		2.25-17-4PR	2.50-17-6PR
Cold tire pressure kg/cm ² (psi)	Up to vehicle capacity Load (135 kg, 300 lb)	2.0 (28)	2.8 (40)
	Up to 90 kg (200 lb) load	2.0 (28)	2.0 (28)

Check the tires for cuts, imbedded nails, or other sharp objects.

Check the front and rear wheels for trueness.

Measure the tread depth at the center of the tires.

Replace the tires if the tread depth reaches the following limit.

MINIMUM TREAD DEPTH:

FRONT: 1.5 mm (1/16 in)

REAR: 2.0 mm (3/32 in)

Retighten the wheel spokes periodically.

STEERING HEAD BEARINGS

NOTE


Check that the control cables do not interfere with handlebar rotation.

Raise the front wheel off the ground.

Check that the handlebar rotates freely.

If the handlebar moves unevenly, binds, or has vertical movement, adjust the steering head bearings by turning the steering head adjusting nut (page 12-18).

GAUGE

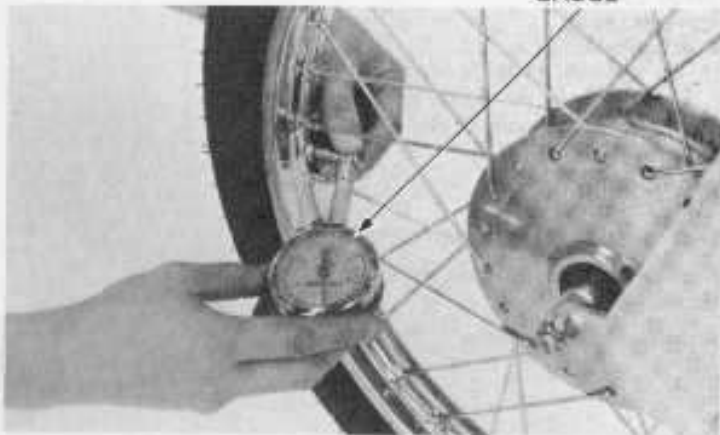

SPOKE NIPPLE SPANNER B, 4.5 x 5.1mm



HEAD BEARINGS