

CARBURETOR REMOVAL

Turn the fuel valve OFF.

Drain residual fuel into a container by loosening the drain screw.

Remove the fuel valve from the carburetor.


Loosen the choke cable clamp and disconnect the choke cable.

Loosen the air cleaner connecting tube band.

Remove the bolts securing the carburetor to the intake pipe.

Unscrew the carburetor top and pull the throttle valve out.

Remove the carburetor mounting bolts and carburetor.

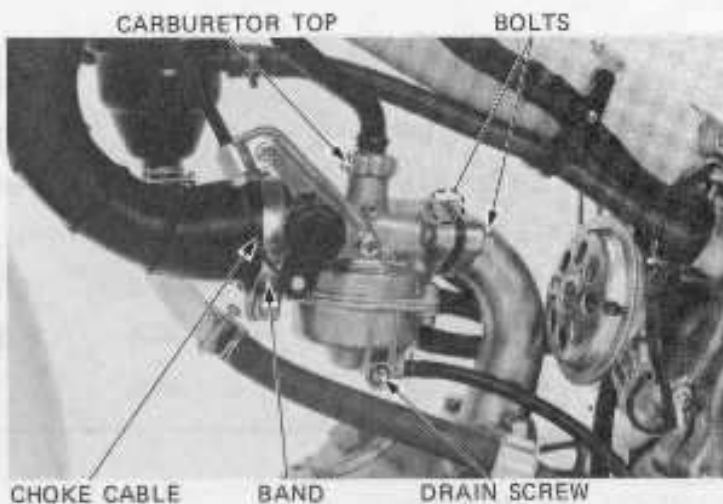

THROTTLE VALVE DISASSEMBLY

Remove the carburetor top and throttle valve.



THROTTLE VALVE

Compress the throttle valve spring and remove the throttle cable from the throttle valve groove.



CABLE END