





Remove the needle clip retainer.  
Remove the jet needle and clip.  
Inspect the throttle valve and jet needle for dirt, scratches or wear.

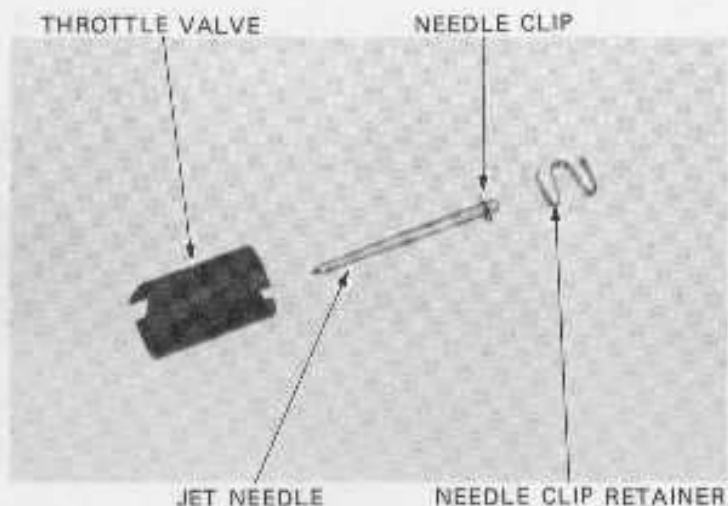

### FLOAT AND JETS

Remove the float chamber and pull out the float pin.  
Remove the float and float valve.

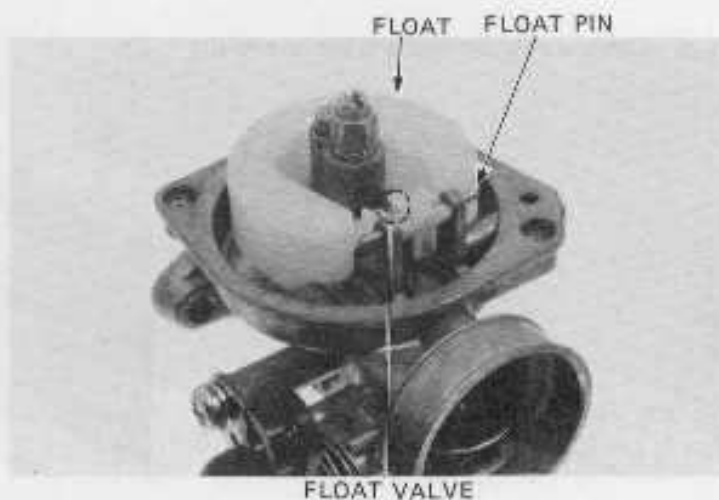

Inspect the float valve and seat for grooves, nicks or deposits.

Inspect the float valve operation.

