


Remove the main jet, needle jet holder and needle jet.

**NOTE**

The slow air jet cannot be removed. It is a press fit.

NEEDLE JET HOLDER MAIN JET SLOW JET

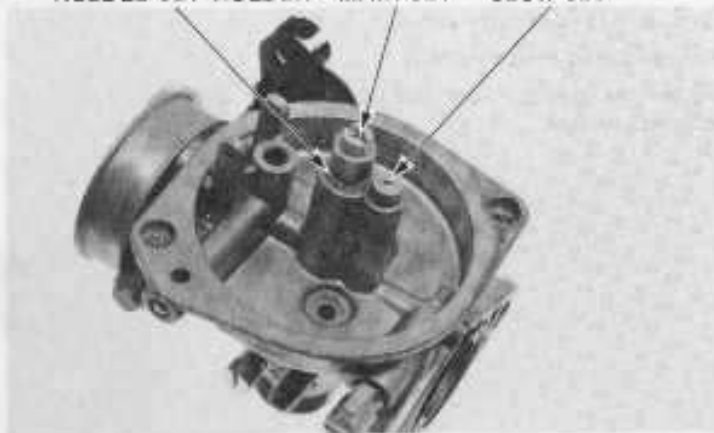

Blow all jets and body passages with compressed air.



**CARBURETOR ASSEMBLY**

Install the needle jet, needle jet holder and main jet. Install the float and float valve together.

**NOTE**

Take care not to damage the jets when installing.

FLOAT NEEDLE JET HOLDER MAIN JET



FLOAT VALVE FLOAT PIN