



FUEL TANK

Turn the fuel valve to RES.


Loosen the drain screw and drain the fuel thoroughly.

Remove the right side cover and the battery.

Disconnect the fuel lines from the fuel tank.

WARNING

*Do not allow flames or sparks near gasoline.
Wipe up spilled gasoline at once.*

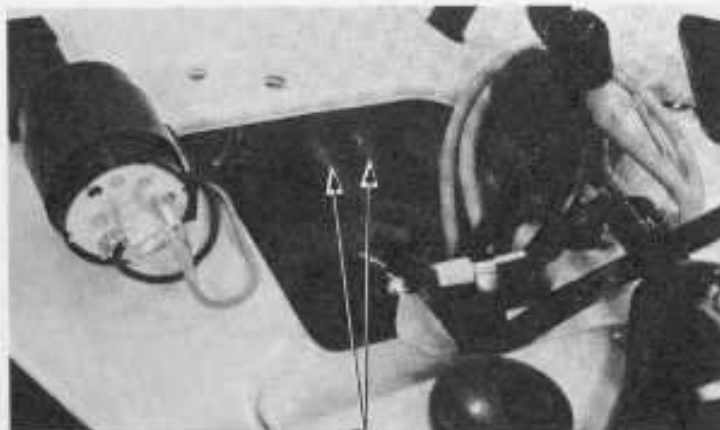

FUEL LINES


Remove the seat.

Remove the screw and bolt securing the fuel tank, then remove the fuel tank.

Install the fuel tank in the reverse order of removal.

Make sure there are no fuel leaks.

Check the vent holes of the filler cap for blockage.

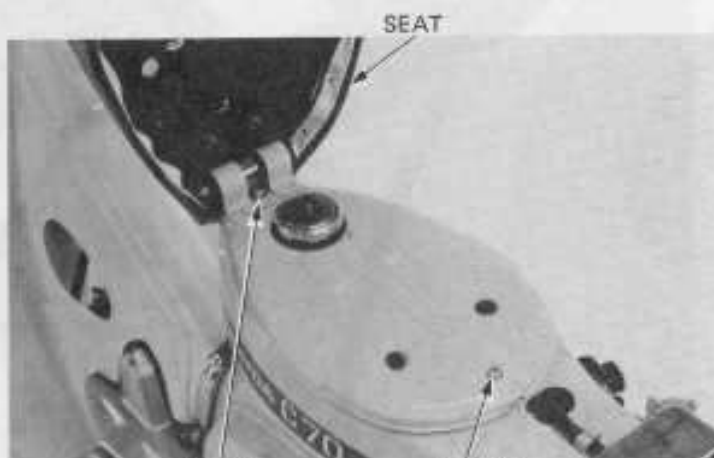

BOLT

SCREW