


## ENGINE REMOVAL

Drain the engine oil.  
Remove the air cleaner cover and front cover band.  
Remove the front cover.



Loosen the exhaust pipe setting nuts.  
Remove the muffler mounting nuts and remove the muffler assembly.  
Disconnect the starter cable.

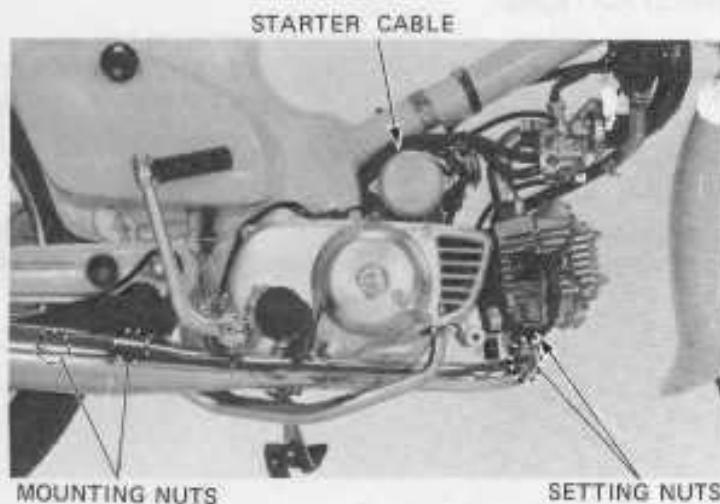

Support the motorcycle upright with a stand.  
Remove the footpegs/side stand assembly.  
Unhook the brake pedal return spring from the engine hanger bolt.

