


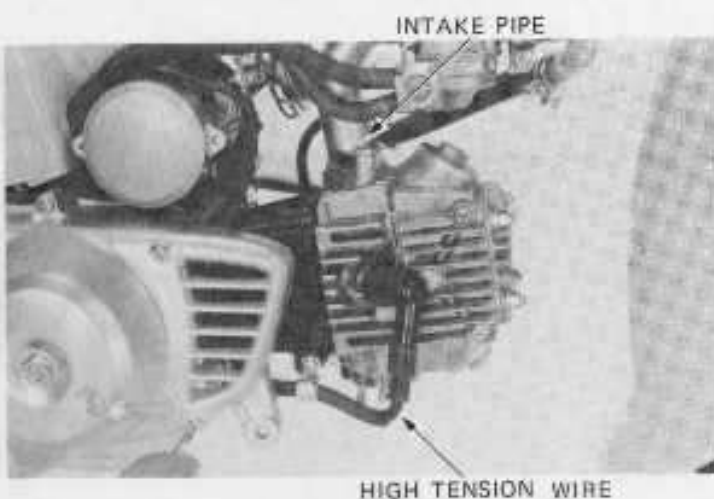

Remove the high tension wire from the spark plug and clamp.


Disconnect the intake pipe from the engine.



Remove the cotter pin and loosen the axle and sleeve nuts.

Loosen the drive chain adjusting nuts.

Remove the left side cover, engine sprocket cover and lower chain case.

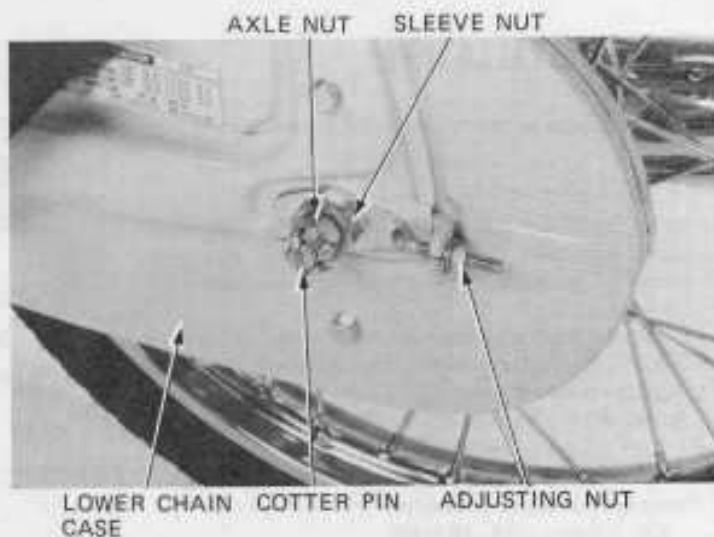

Remove the master link retaining clip and master link at the drive sprocket.

