



CYLINDER HEAD REMOVAL

Remove the front cover.

Disconnect the intake pipe from the cylinder head.

Remove the contact point cover and turn the crankshaft counterclockwise to align the "T" mark with the index mark.

INDEX MARK




"T" MARK

Remove the muffler.


Remove the spark plug cap.

Remove the cylinder head left side cover by removing the through bolt from the right side.

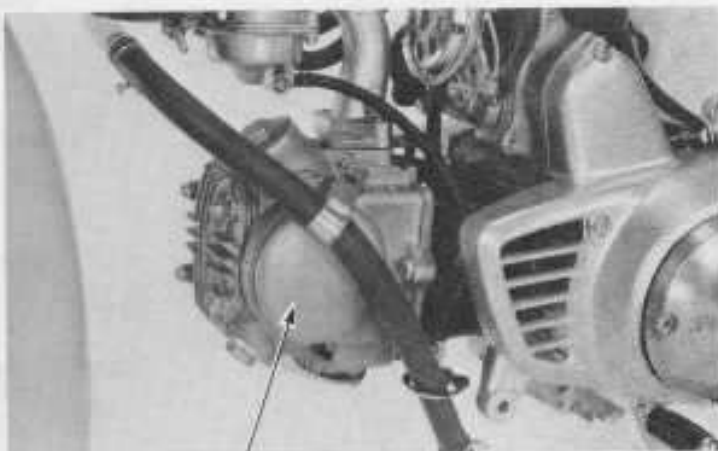

CYLINDER HEAD
LEFT SIDE COVER

Remove the camshaft sprocket.

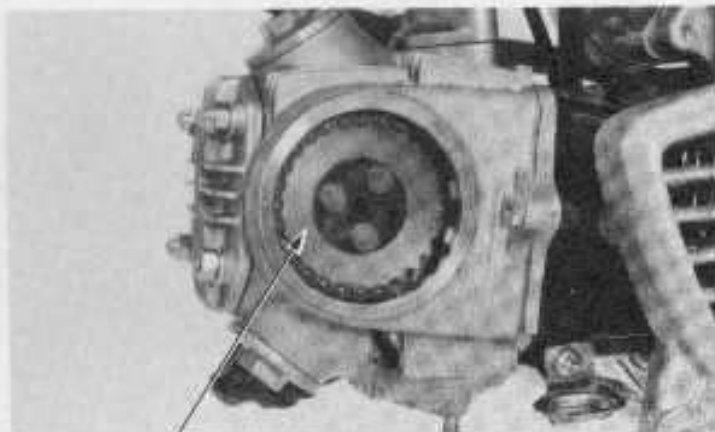

CAMSHAFT SPROCKET