


Loosen the cylinder 6 mm bolt.
Remove the cylinder head 6 mm bolt and cylinder head cover.
Remove the cylinder head.

CYLINDER HEAD COVER

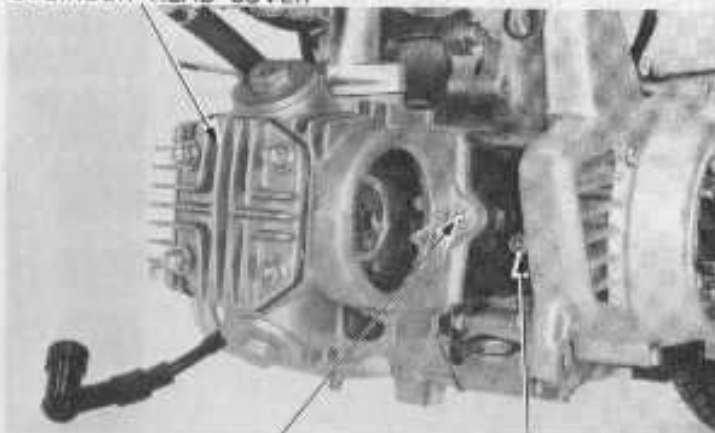

CYLINDER HEAD
6mm BOLT

CYLINDER
6mm BOLT

Remove the O-rings, cylinder head gasket and dowel pins.

DOWEL PINS




GASKET

O-RINGS

CYLINDER HEAD DISASSEMBLY

Remove the cylinder head right side cover and gasket.
Remove the valve inspection caps and O-rings.

VALVE INSPECTION CAPS

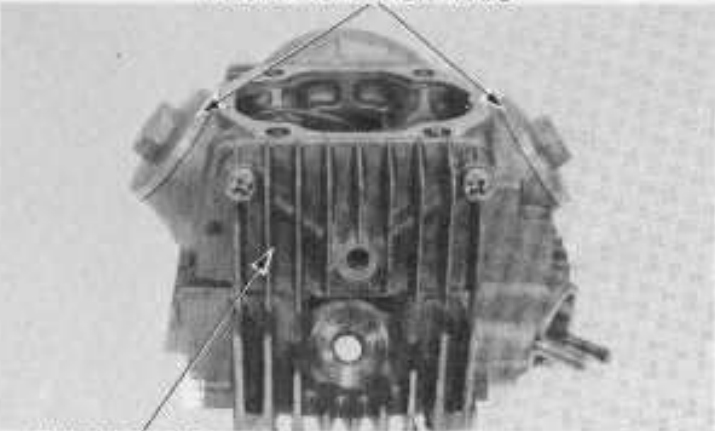

CYLINDER HEAD
RIGHT SIDE COVER