


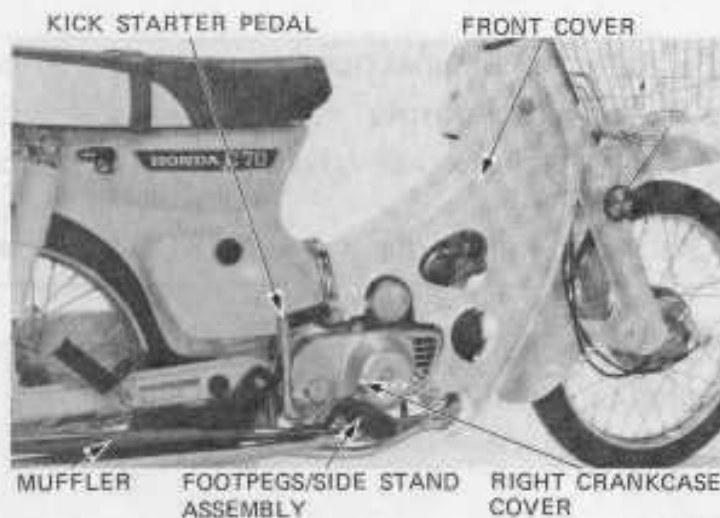

RIGHT CRANKCASE COVER REMOVAL


Drain the engine oil thoroughly.
Support the motorcycle upright with a stand.

Remove the right crankcase cover (page 2-2).



CLUTCH LIFTER REMOVAL

Remove the clutch lifter and clutch adjusting bolt.

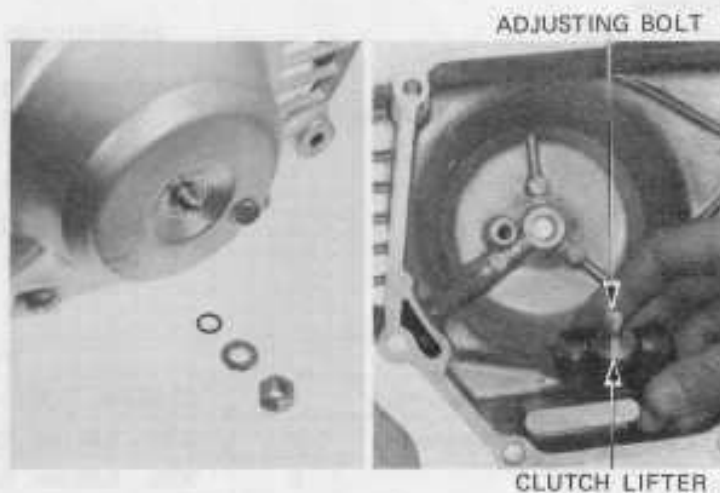

CLUTCH REMOVAL

Remove the clutch lever and clutch cam.
Remove the clutch outer cover.

