


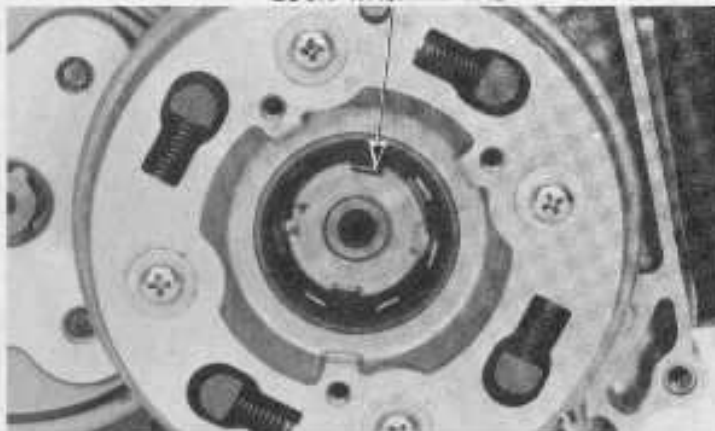


Straighten the lock washer tab.

LOCK WASHER TAB



Remove the lock nut, washer and lock washer.
The clutch can now be removed as a unit.
Remove the drive gear and clutch center guide.

UNIVERSAL HOLDER

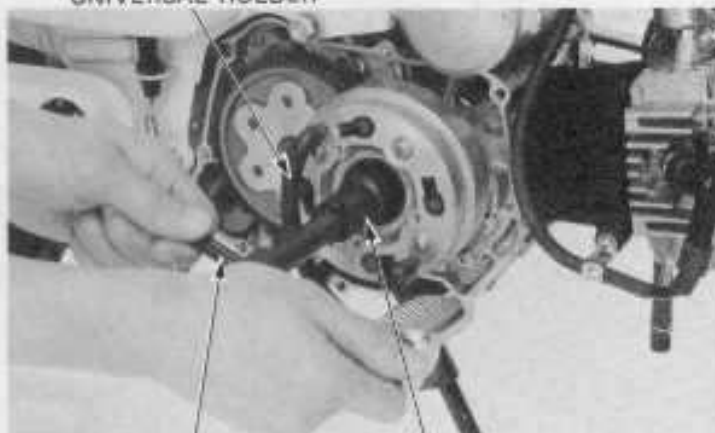

EXTENSION

LOCK NUT WRENCH,
20 x 24mm

CLUTCH DISASSEMBLY

Remove the set ring using a screwdriver.
Remove the clutch plates, discs, center, drive gear
outer and rollers.

SET RING

