


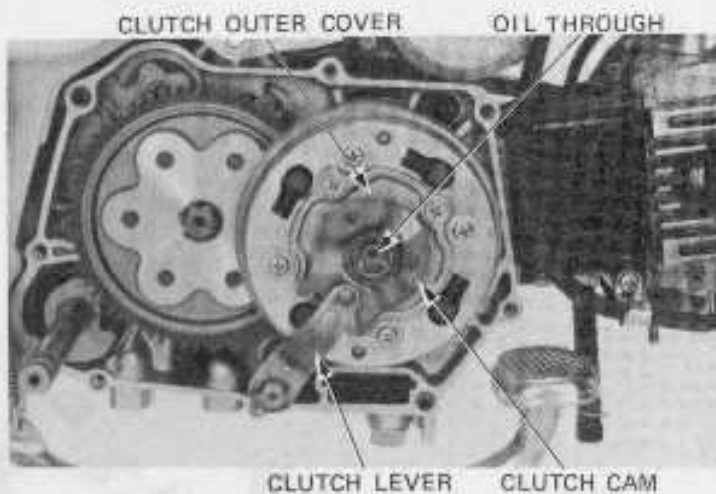


Install the clutch outer cover.
Install the clutch cam and lever.
Install the spring, oil through, clutch cam spring and ball retainer.



RIGHT CRANKCASE COVER INSTALLATION

Install the clutch adjusting bolt and lifter.

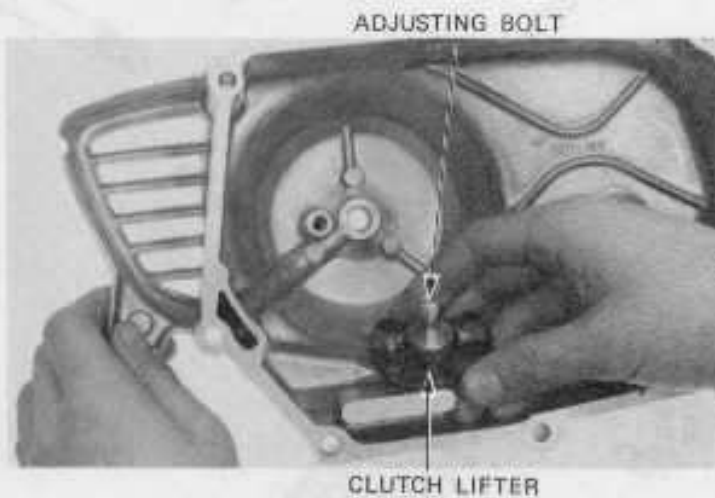

Install the O-ring, washer and lock nut.
Install the right crankcase cover.
Install the kick starter pedal, footpegs/side stand assembly, muffler and front cover.
Fill the crankcase to the proper level with the recommended oil (page 2-2).
Adjust the clutch (page 3-16).

