



GEARSHIFT LINKAGE REMOVAL

Drain the engine oil.

Remove the gearshift pedal.


GEARSHIFT PEDAL



Remove the right crankcase cover and clutch assembly (Section B).


Remove the snap ring and driven gear.

DRIVEN GEAR

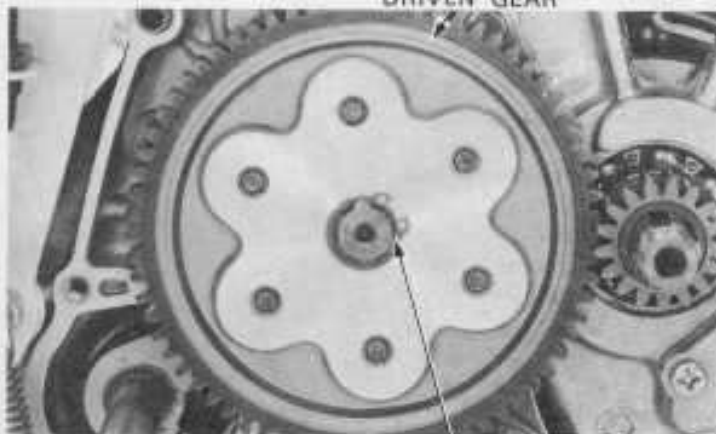

SNAP RING

Remove the drum stopper arm.

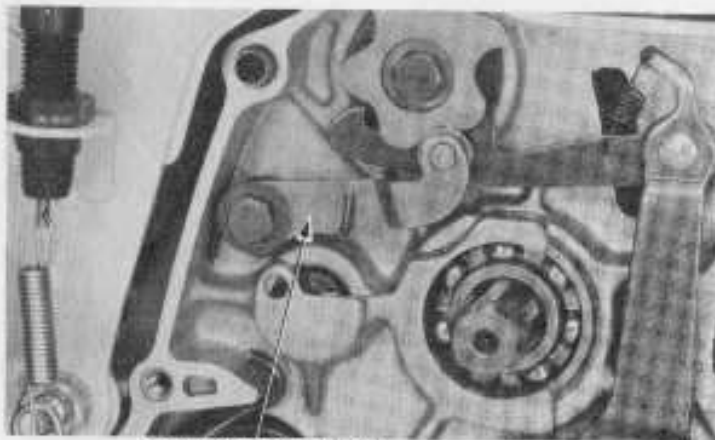

DRUM STOPPER ARM