




## TRANSMISSION DISASSEMBLY

Remove the crankshaft and kick starter spindle.

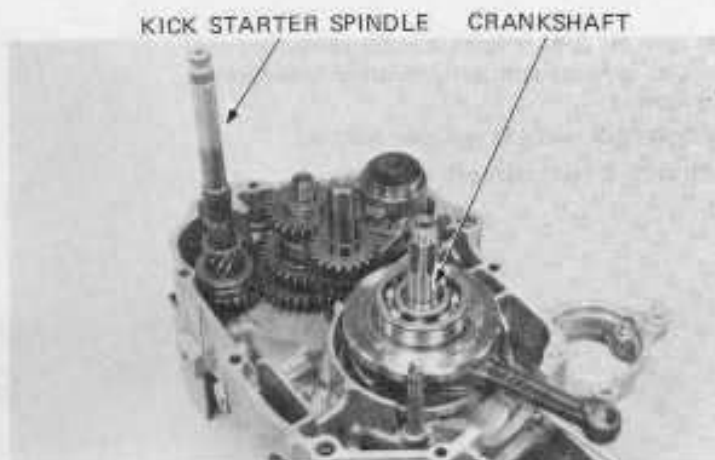

Remove the transmission and shift drum as an assembly.



## KICK STARTER SPINDLE DISASSEMBLY

Remove the snap ring and disassemble the kick starter spindle.

Check the driven ratchet, pinion and spindle for excessive wear.

