




KICK STARTER SPINDLE ASSEMBLY

Assemble the kick starter as shown.

NOTE

Position the friction spring in the driven ratchet groove.

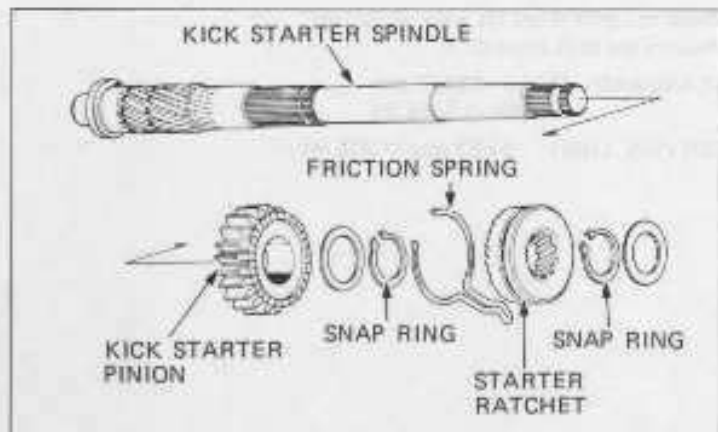


TRANSMISSION INSTALLATION

Install the drum and transmission in the left crankcase as an assembly.

NOTE

- Align the neutral switch rotor with the neutral switch.
- After installing, rotate the mainshaft to make sure that the gears rotate freely.

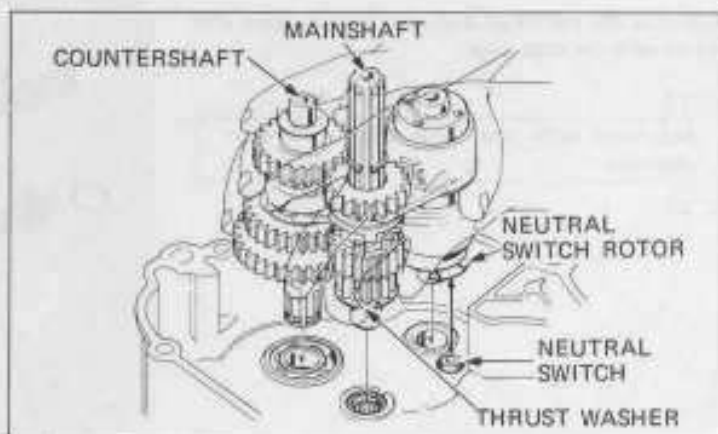

Install the kick starter spindle so that the friction spring rests in the crankcase groove.

