



CAM CHAIN TENSIONER


Remove the A.C. generator and flywheel (Section 14).

Remove the starter chain guide.

Remove the starter chain protector.

Remove the starter sprockets and chain as a unit.

Remove the crankshaft cover.

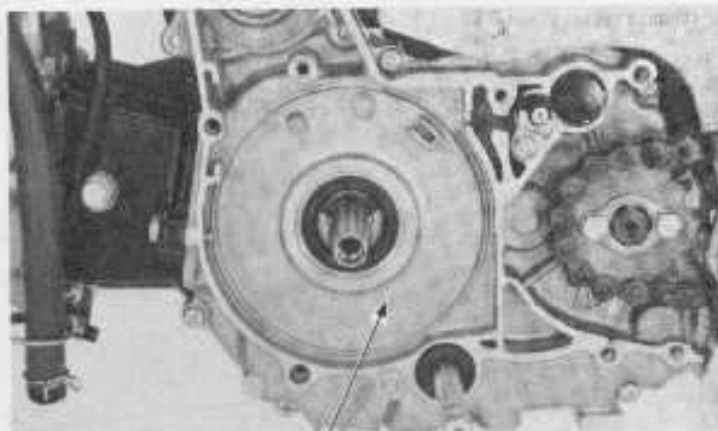

CRANKSHAFT COVER

Remove the tensioner push rod.


Remove the cam chain tensioner.

Check the tensioner sprocket for wear or damage.

Installation is the reverse of removal.

NOTE

Be sure to install O-rings on the crankshaft cover screw holes.

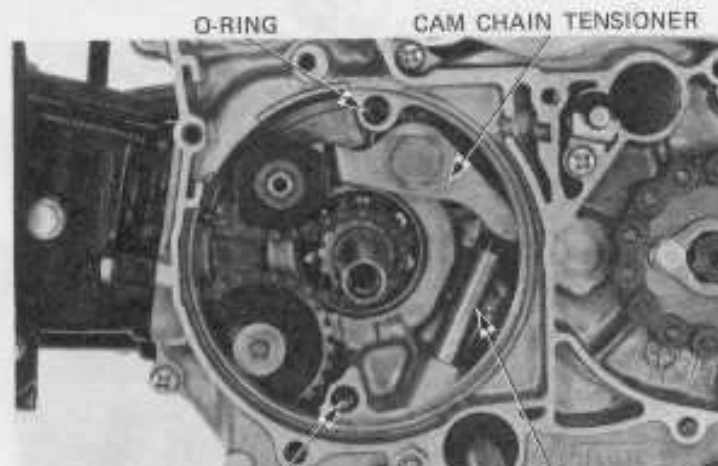

O-RING TENSIONER PUSH ROD