



HEADLIGHT

REMOVAL

Remove the headlight mounting screws.

Disconnect the headlight wire connectors and remove the headlight.



DISASSEMBLY/ASSEMBLY

Remove the horizontal and vertical adjusting screws from the rim.

Remove the clip and sealed beam unit retaining screw, and sealed beam unit.

Assembly is the reverse of disassembly. After assembly, adjust the headlight beam (page 3-15).

SEALED BEAM RETAINING SCREW



HORIZONTAL
ADJUSTING SCREW

VERTICAL
ADJUSTING SCREW

INSTRUMENTS

REMOVAL

Remove the headlight.

Remove the handlebar mounting nuts.

