




## FRONT WHEEL

## REMOVAL

Raise the front wheel off the ground by placing a support block under the engine.

Loosen the speedometer cable nut and remove the speedometer cable.

Remove the front brake adjusting nut and disconnect the brake cable from the brake arm.

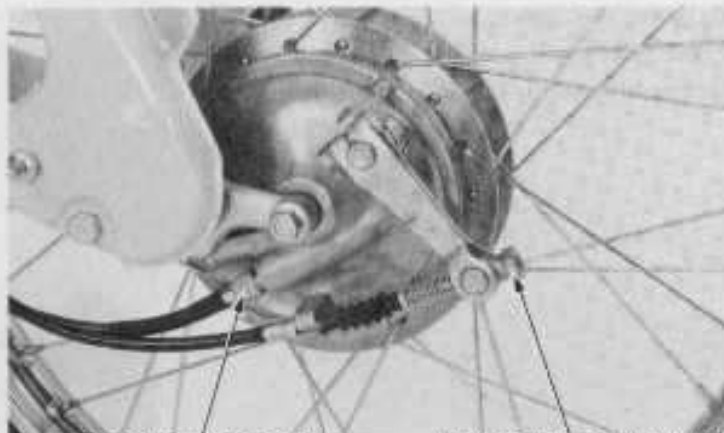


SPEEDOMETER CABLE

BRAKE ADJUSTING NUT

Remove the cotter pin and loosen the axle nut.

Remove the front axle.

Remove the front wheel.

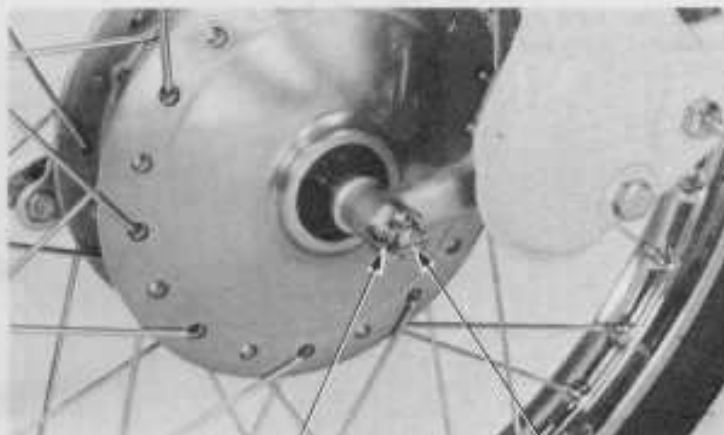

AXLE NUT

COTTER PIN

## WHEEL BEARING INSPECTION

Check wheel bearing play by placing the wheel in a truing stand and spinning the wheel by hand. Replace the bearings with new ones if they are noisy or have excessive play.

**SERVICE LIMIT: 0.03 mm (0.001 in)**

