




BRAKE PANEL DISASSEMBLY

Remove the brake arm, indicator plate and return spring.

Remove the brake shoes and brake cam.

Remove the speedometer gear.

Remove the seal.

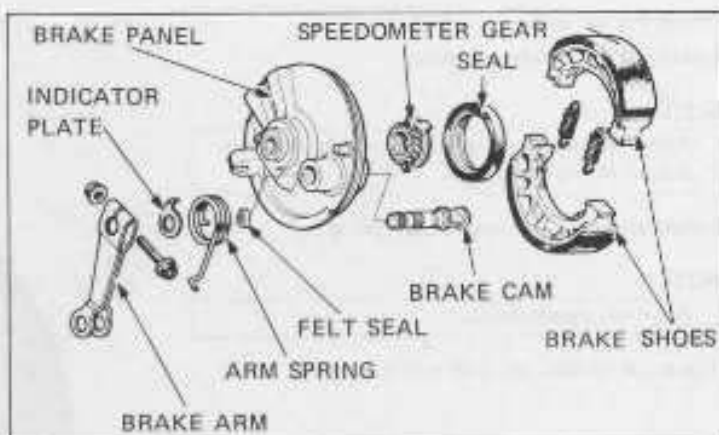

BRAKE PANEL ASSEMBLY

Apply grease to the speedometer gear and install the gear.

Install the seal.



Apply grease to the sliding surface of the brake cam.

Install the brake cam.

Install the brake shoes and shoe springs.

WARNING

*Contaminated brake linings reduce stopping power.
Keep grease off the linings.*

