





DISASSEMBLY

Remove the lower shock absorber mounting bolt and separate the suspension arm from the shock absorber.

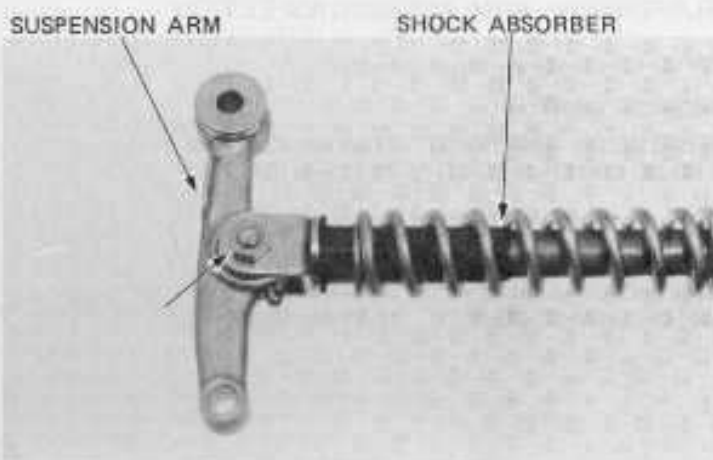

Remove the dust caps and disassemble the suspension arm.

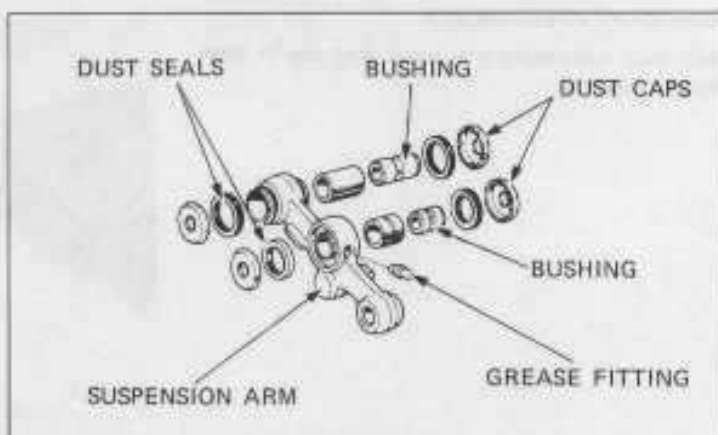

SHOCK ABSORBER INSPECTION

Inspect the shock body for oil leaks.

Measure the free length of spring.

SERVICE LIMIT: 165.5 mm (6.52 in)

