

SUSPENSION ARM BUSHING INSPECTION

Measure the bushing outside diameter.

SERVICE LIMIT:

SUSPENSION ARM PIVOT: 13.55 mm (0.533 in)


SHOCK LOWER MOUNT: 11.61 mm (0.457 in)

Measure the bushing collar inside diameter.

SERVICE LIMIT:

SUSPENSION ARM PIVOT: 14.47 mm (0.570 in)


SHOCK LOWER MOUNT: 12.41 mm (0.489 in)

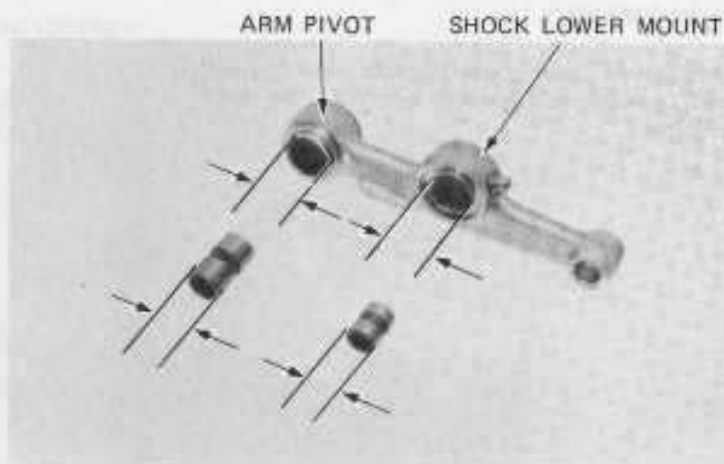

ASSEMBLY

Assemble the suspension arms.

Peen each suspension arm pivot dust cap in three places as shown.

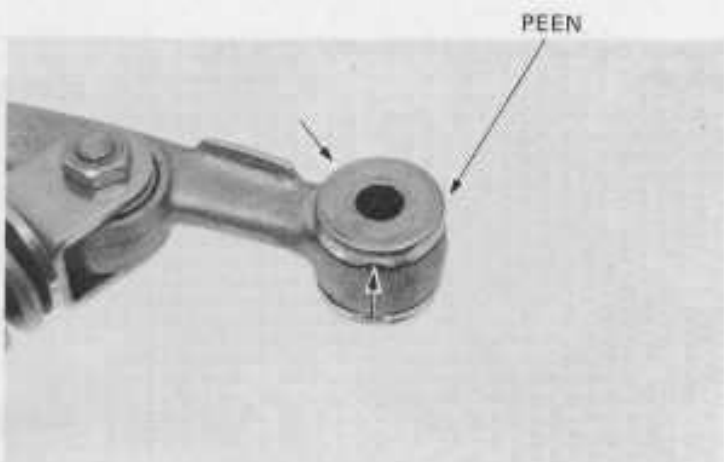

Install the suspension arm to the shock absorber and tighten the bolt and nut.

