


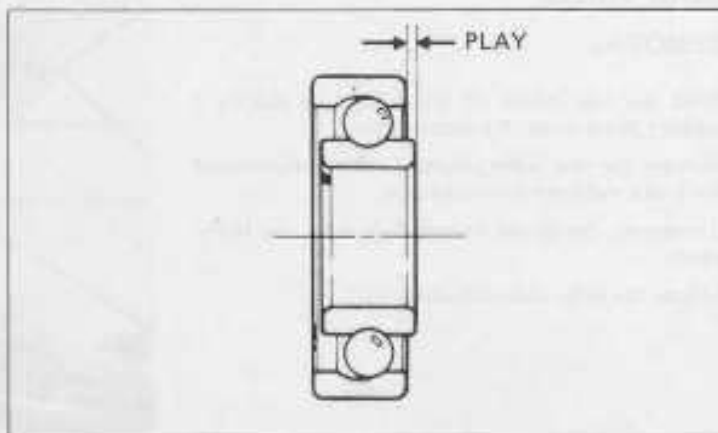

WHEEL BEARING INSPECTION

Check wheel bearing play by placing the wheel in a truing stand and spinning the wheel by hand. Replace the bearings with new ones if they are noisy or have excessive play.

SERVICE LIMIT: 0.03 mm (0.001 in)



WHEEL BEARING REPLACEMENT

Remove the bearings and distance collar from the hub.



Pack the bearing with grease.
Drive in the right bearing first.
Press the distance collar into place.

NOTE

- Drive the bearing squarely.
- Drive the bearing into position, making sure the it is fully seated and that the sealed side is facing out.

BEARING DRIVER HANDLE A — 07949-3000000
BEARING DRIVER OUTER, 37 x 40 mm } — 07945-0980000
BEARING DRIVER PILOT, 12 mm }

