


Remove the drive chain.  
Remove the sleeve nut and driven flange.

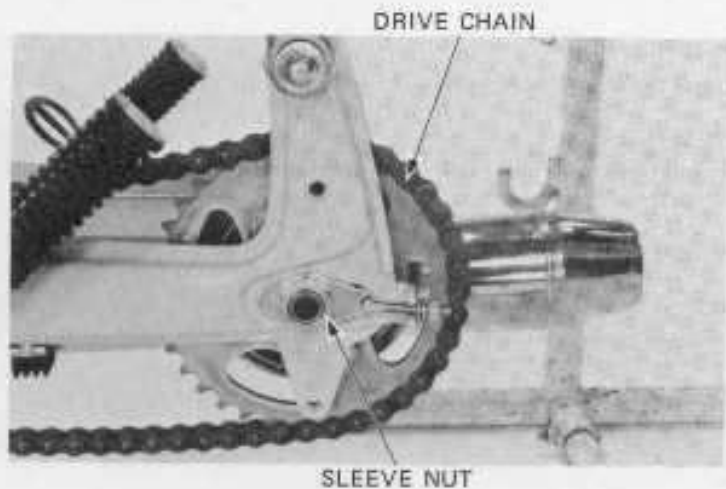


**DRIVEN SPROCKET**

• **INSPECTION**

Replace the sprocket if worn, bent or damaged.

**NOTE**

If the driven sprocket requires replacement, inspect the drive chain and drive sprocket (page 3-12).

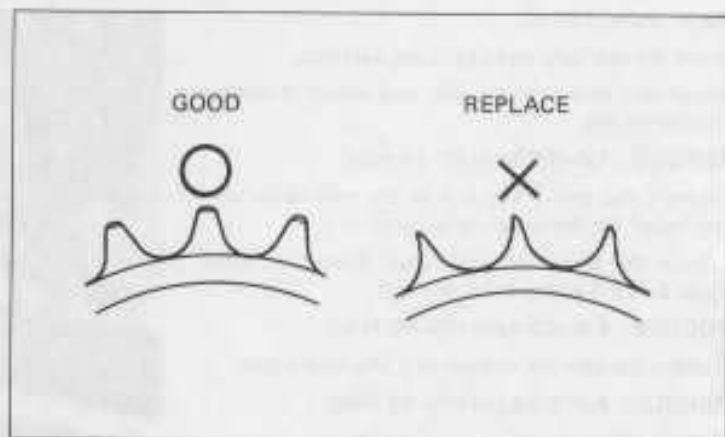

• **REPLACEMENT**

Straighten the lock plate tabs and remove the sprocket mounting bolts.

Remove the sprocket.

Install a new sprocket, lock plates and bolts.

Tighten the bolts and bend the lock plate tabs against the bolt heads.

**TORQUE: 2.0–2.5 kg-m (14–18 ft-lb)**

