




BEARING

• INSPECTION

Check the driven flange bearing play by spinning the bearing by hand. Replace the bearing with a new one if it is noisy or has excessive play.

SERVICE LIMIT: 0.03 mm (0.001 in)

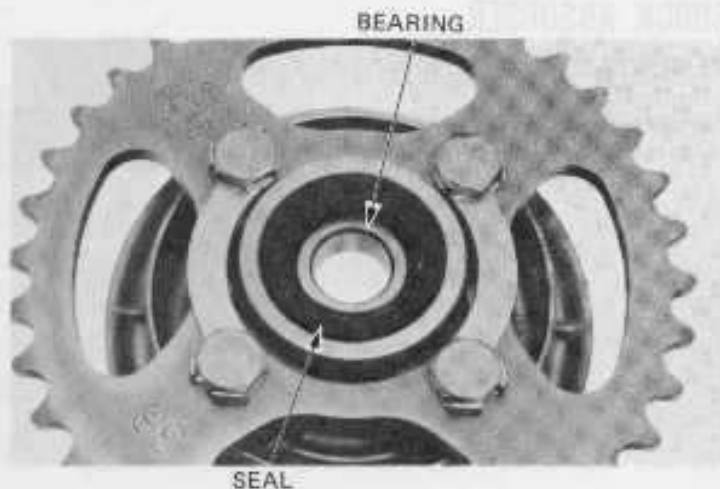

• REPLACEMENT

Remove the seal and bearing.

Pack the bearing with grease.

Drive in the bearing squarely until it seats fully.

Install the seal.

BEARING DRIVER HANDLE A — 07949-3000000



BEARING DRIVER OUTER, 37 x 40 mm

BEARING DRIVER PILOT, 17 mm

07946-3000000

INSTALLATION

Install the driven flange and flange sleeve.

NOTE

Align the flats on the sleeve with the hole in the swingarm.


Install the left drive chain adjuster and sleeve nut.

Install the rear wheel (page 13-7).

Install and adjust the drive chain (page 3-11).

Adjust the rear brake (page 3-14).

Install the upper and lower chain case, drive sprocket cover and left side cover.

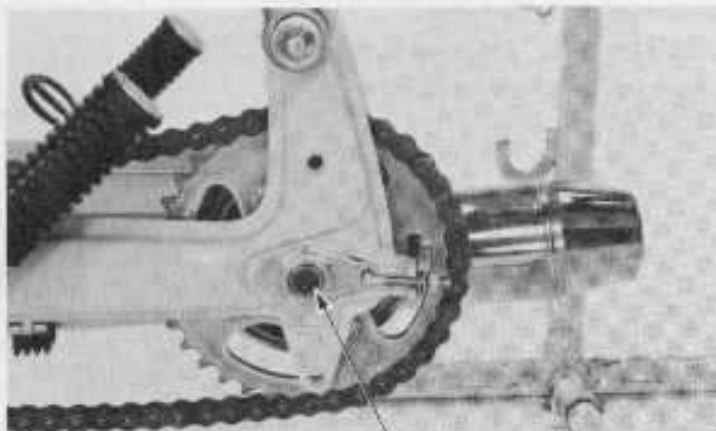

SLEEVE NUT