



SHOCK ABSORBER

REMOVAL

Remove the upper and lower shock absorber mounting nuts and bolts, and remove the shock absorbers.




DISASSEMBLY

Compress the spring just enough to remove the lock nut.

Loosen the lock nut and remove the upper mount. Disassemble the unit.

SHOCK ABSORBER COMPRESSOR

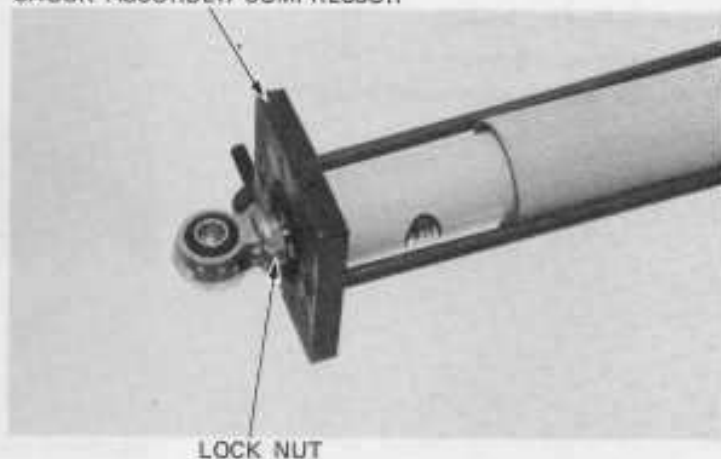

LOCK NUT

SPRING FREE LENGTH INSPECTION

Measure the spring free length.

SERVICE LIMIT: 210.5 mm (8.30 in)

Inspect the shock body for oil leaks.

