

**TROUBLESHOOTING****No power — key turned on**

1. Dead battery
  - Low fluid level
  - Low specific gravity
  - Charging system failure
2. Disconnected battery cable
3. Main fuse burned out
4. Faulty ignition switch

**Low power — key turned on**

1. Weak battery
  - Low fluid level
  - Low specific gravity
  - Charging system failure
2. Loose battery connection

**Low power — engine running**

1. Battery undercharged
  - Low fluid level
  - One or more dead cells
2. Charging system failure

**Intermittent power**

1. Loose battery connection
2. Loose charging system connection
3. Loose starting system connection
4. Loose connection or short circuit in ignition system

**Charging system failure**

1. Loose, broken, or shorted wire or connection
2. Rectifier faulty
3. A.C. generator faulty