





### A.C. GENERATOR

#### STATOR REMOVAL

- Remove the gear shift pedal.
- Remove the drive sprocket cover.
- Disconnect the A.C. generator coupler.
- Remove the contact point cover, contact breaker base plate and spark advancer (page 15-4).
- Disconnect the neutral switch wire at the switch.
- Remove the left crankcase cover.

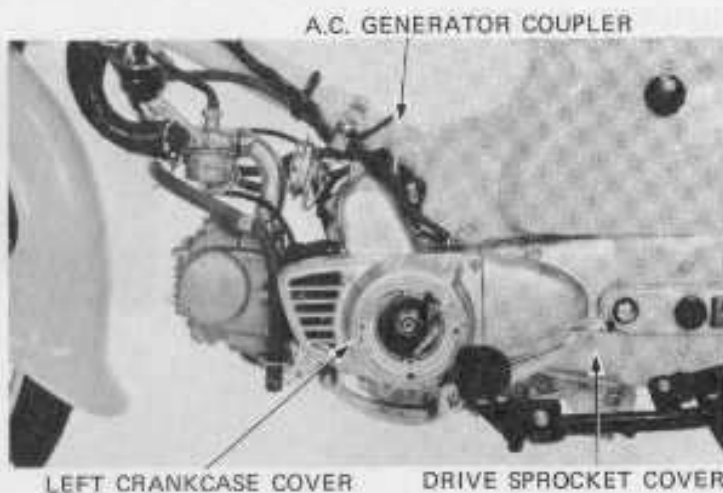

- Remove the two stator screws, wire protector and stator from the left crankcase cover.

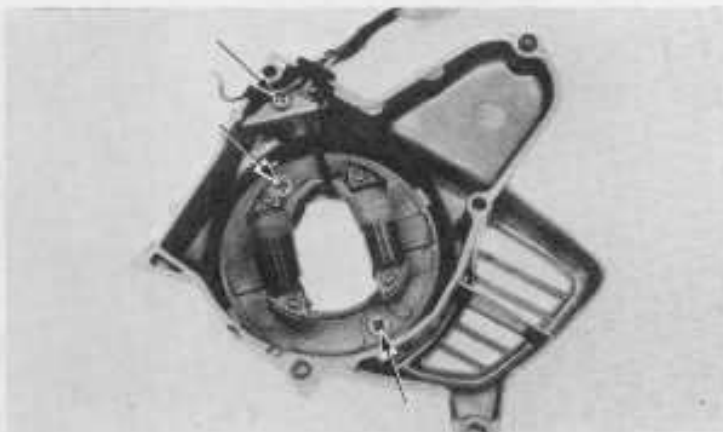

#### STATOR COIL CONTINUITY TEST

##### NOTE

It is not necessary to remove the stator to make this test.

- Check continuity between the yellow, white, black/white leads and stator ground with an ohmmeter on the R $\times$ 1 scale. Replace the stator if there is no continuity.

