



**GENERATOR ROTOR**

• **REMOVAL**


Use the flywheel holder or band strap holder and block the flywheel to prevent the crankshaft from turning.

Remove the generator rotor bolt.



FLYWHEEL HOLDER 07922-1790000  
U.S.A. ONLY - USE COMMERCIALY  
AVAILABLE BAND STRAP WRENCH


Remove the generator rotor.

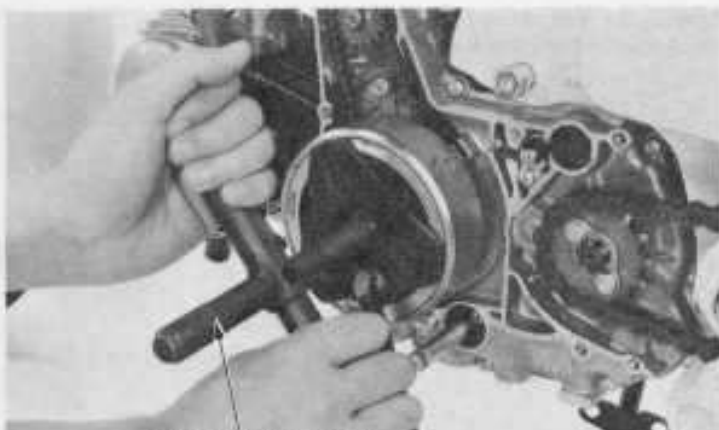

ROTOR PULLER OR  
U.S.A. ONLY, REMOVING BOLT  
90015-360-000

• **INSTALLATION**

Align the rotor keyway with the key on the crankshaft and install the generator rotor.

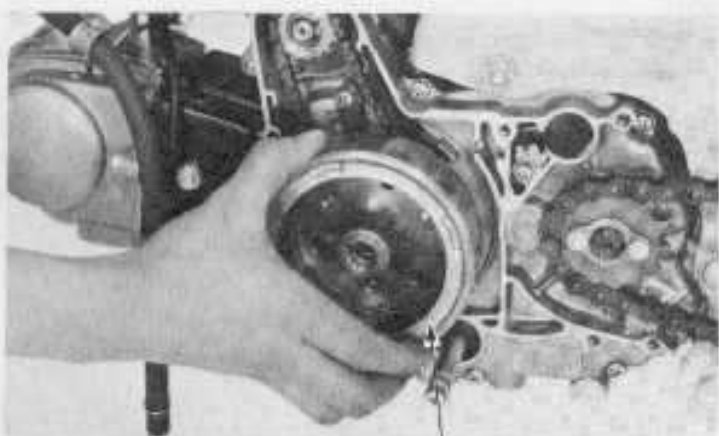

GENERATOR ROTOR