



RECTIFIER

REMOVAL

Remove the right side cover.
Remove the rectifier.



INSPECTION

Check the rectifier for continuity between the terminals. Reverse the leads and check again. Continuity should exist in one direction only. Replace the rectifier if there is continuity in both directions.

