



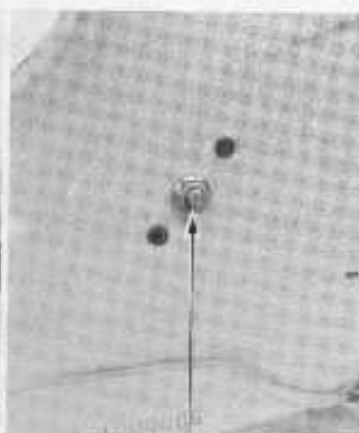
IGNITION COIL

REMOVAL

Remove the right and left side covers.
Remove the battery and starter relay switch.
Disconnect the wire leads.
Remove the coil by removing the attaching nut from the left side.



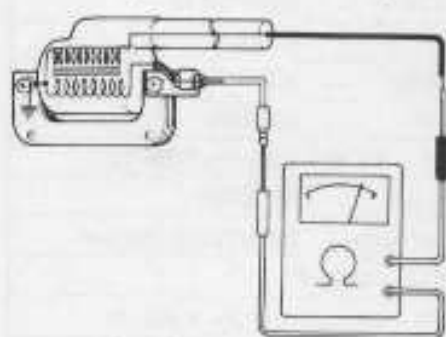
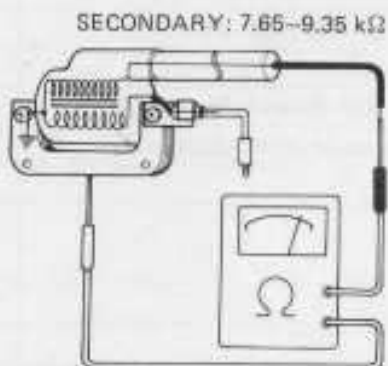
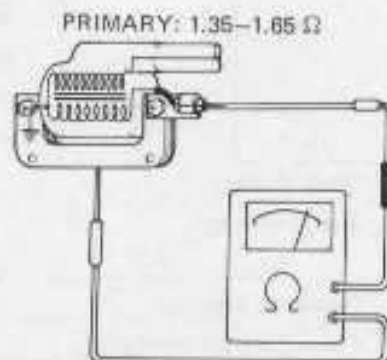
IGNITION COIL



ATTACHING NUT

CONTINUITY TEST

Check for continuity as shown.
The coil is good if there is continuity.

R \times 1 ContinuityR \times 1,000R \times 1SECONDARY: 7.65–9.35 k Ω PRIMARY: 1.35–1.65 Ω

PERFORMANCE TEST

Perform the 3-point spark test with a coil tester.

SERVICE LIMIT: 6 mm (1/4 in) min.

NOTE

Follow the coil tester manufacturer's instructions.

