


## SPARK ADVANCER

For advancer function test, see page 3-9.

Remove the contact point cover and contact breaker assembly.

Check the spring for loss of tension and advancer pin for excessive wear if the advancer fails to return. Replace if necessary.

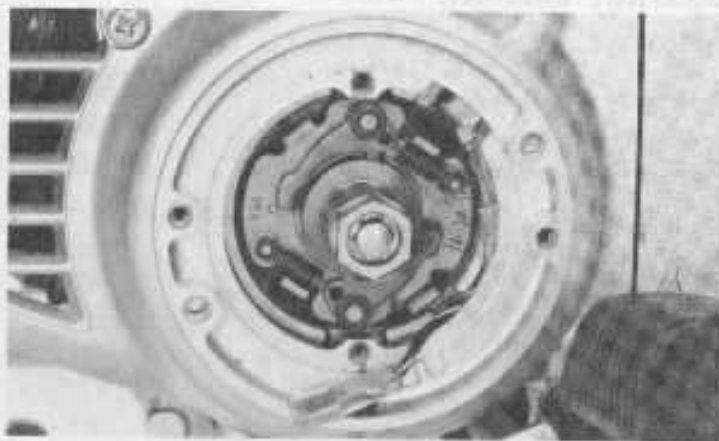

## ADVANCER REPLACEMENT

Remove the bolt by holding the spacer.  
Remove the advancer.



Install the advancer, aligning the slot with the flywheel pin.

Install the spacer and tighten the bolt.

**TORQUE: 0.9–1.2 kg-m (7–9 ft-lb)**

