




BRUSH WIRE INSPECTION

Check for continuity from the cable terminal to the brushes with black wire, and to the motor case.

Repair the brush wire if the wire is broken or if it is shorted to the motor case.

Cable terminal to motor case: No continuity


Cable terminal to brush: Continuity

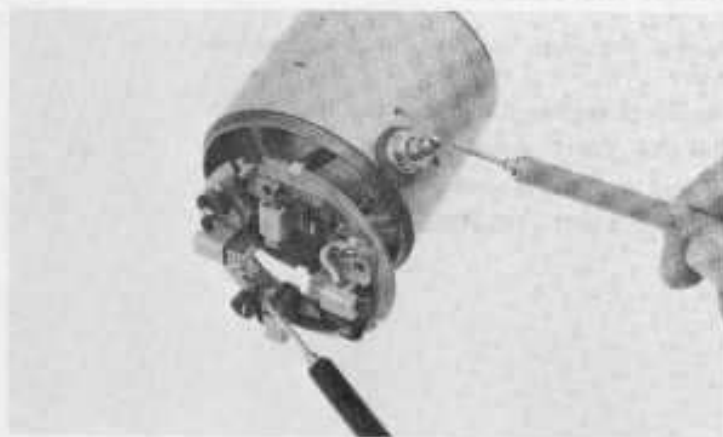

ASSEMBLY/INSTALLATION

Assemble the starter motor.

Align the case notch with the brush holder pin.

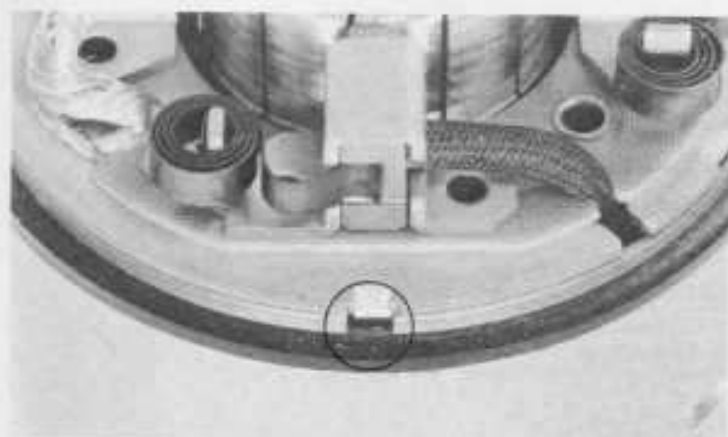

Install the rear cover aligning its slot with the brush holder pin.

Install the starter motor by reversing the removal procedure.

