



ELECTRIC STARTER

STARTER CLUTCH DISASSEMBLY

Remove the three screws.

Remove the starter clutch outer.

Remove the rollers, plungers and springs.

STARTER CLUTCH INSPECTION

Inspect the rollers for smooth operation.

Check the rollers for excessive wear.



Inspect the drive and driven sprockets and chain for excessive wear or damage.

Measure the drive sprocket O.D.

SERVICE LIMIT: 36.76 mm (1.447 in)



STARTER CLUTCH ASSEMBLY

Install the starter clutch outer.

NOTE

Stake the end of each screw against the groove in the clutch outer.

Install the springs, plungers and rollers.

INSTALLATION

Reverse the removal procedure.

