




BRAKE SWITCHES

FRONT BRAKE SWITCH

Remove the headlight.
Disconnect the G/Y and Bk leads of the front brake switch.
Check for continuity with the front brake applied.
Brake applied: Continuity
Brake not applied: No continuity
Replace the switch if necessary.

FRONT BRAKE SWITCH

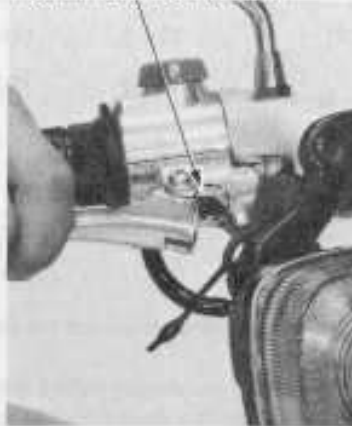

G/Y LEAD



Bk LEAD

REAR BRAKE SWITCH

Remove the right side cover.
Disconnect the G/Y and Bk leads of the rear brake switch.
Check for continuity with the rear brake applied.
Brake applied: Continuity
Brake not applied: No continuity
Replace the switch if necessary.

REAR BRAKE SWITCH



Bk LEAD

G/Y LEAD

NEUTRAL SWITCH

Remove the left side cover and engine sprocket cover.
Check the switch for continuity between the switch terminal (wire removed) and ground with the transmission in neutral and with the transmission in any gear.

In neutral: Continuity

In gear: No continuity

Replace the neutral switch if necessary.

NEUTRAL SWITCH

