

SWITCHES

STARTER BUTTON

Y/R to LG/R with button depressed.
No continuity with button released.

Starter Button

	ST	N
FREE		
PUSH	○ — ○	○ — ○
Color code	Y/R	LG/R


ENGINE STOP SWITCH

RUN: No continuity
OFF: Bk/W to G

Engine Stop Switch

	IG	E
OFF	○ — ○	○ — ○
RUN		
OFF	○ — ○	○ — ○
Color code	Bk/W	G

ENGINE STOP SWITCH

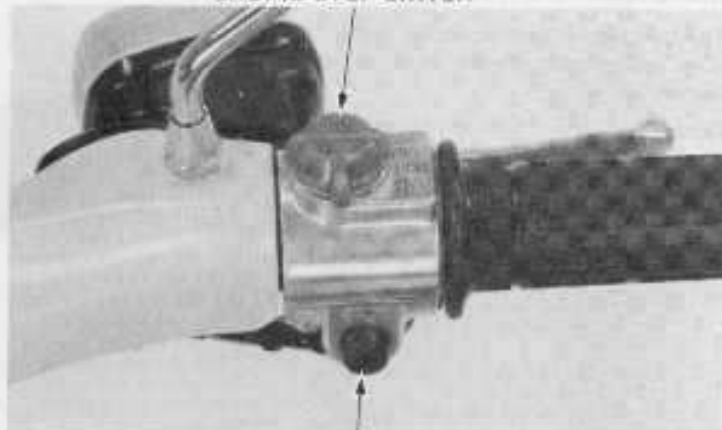

STARTER BUTTON

IGNITION SWITCH

Remove the front cover and disconnect the coupler.
Check the continuity of terminals in the ignition switch side coupler.

OFF: Bk/W to G
ON: Bk to R

	ST	BAT	IG	E
OFF			○ — ○	○ — ○
ON	○ — ○	○ — ○		
Color code	Bk	R	Bk/W	G

Replace the switch if necessary.

COUPLER



IGNITION SWITCH