



CARBURETOR CHOKE

Check for smooth choke lever operation.

The lever should stay where positioned. Move the choke lever all the way to the left and make sure the choke valve is closed by moving the choke lever at the carburetor.

ADJUSTMENT:

Remove the front cover.

Loosen the cable clamp and pull the cable casing up just until the choke valve is fully closed. Retighten the clamp. Move the choke lever all the way to the right and be sure the choke valve is fully open by checking for 1–2 mm (1/16–1/8 in) cable slack.

Install the front cover.



CHOKE LEVER


CHOKE LEVER

AIR CLEANER

Turn the handlebar all the way to the right.

Loosen the screws attaching the connecting tube and breather tube and disconnect the tubes.

Remove the screws attaching the air cleaner case. Pull out the case with the air cleaner element.

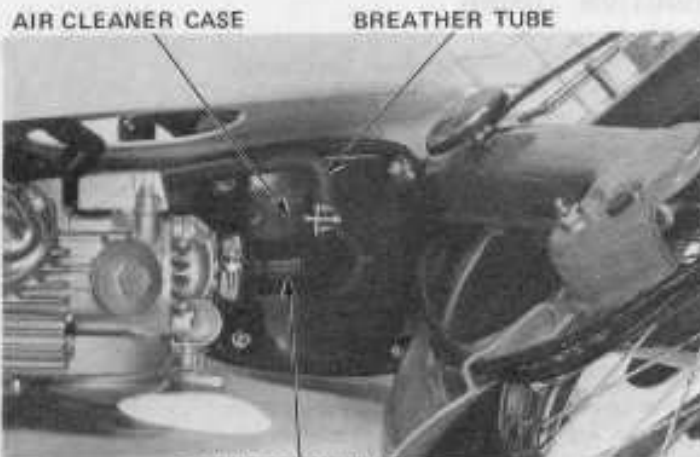

AIR CLEANER CASE

BREATHER TUBE

CONNECTING TUBE

Remove the air cleaner element.

Clean the element by tapping it lightly to loosen dust. Blow away any remaining dust by applying compressed air from the inside of the element.

Replace the element if it is excessively dirty, torn or damaged.

Install the element and connect the connecting tube.

Install the air cleaner case.

Connect the breather tube.



AIR CLEANER CASE

ELEMENT