



## TENSIONER

### REMOVAL

Remove the tensioner push rod (page 20-14).

Remove the A.C. generator and flywheel (page 20-19).

Remove the starter chain and sprockets (page 16-5).

Remove the crankshaft cover and the cam chain tensioner.

Check the tensioner sprocket for wear or damage.

CRANKSHAFT COVER



O-RING

## TENSIONER/PUSH ROD


### INSTALLATION

Install the cam chain tensioner.

Install the O-rings on the crankshaft cover screw holes and cover.

Install the crankshaft cover and tighten it with two screws.

O-RING BOLT CAM CHAIN TENSIONER

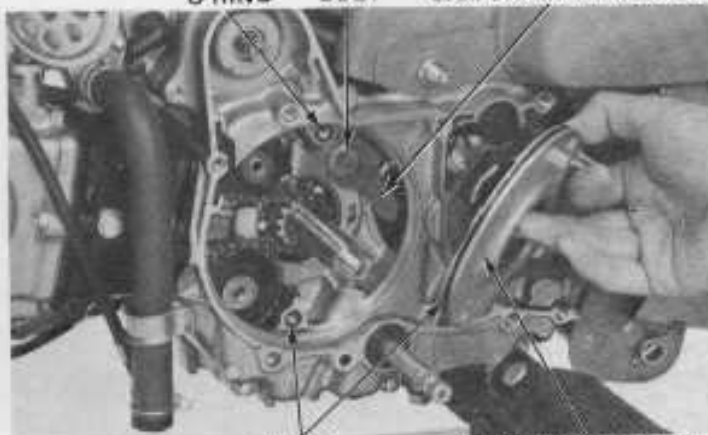


O-RING

CRANKSHAFT COVER

Install the starter chain and sprockets.

Install the flywheel and A.C. generator (page 20-19).

SNAP RING CHAIN GUIDE

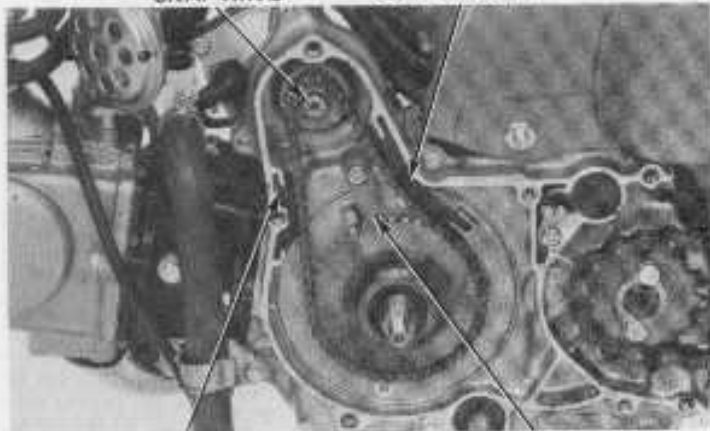

PROTECTOR

SETTING PLATE