





Remove two stator screws and stator from the left crankcase cover.

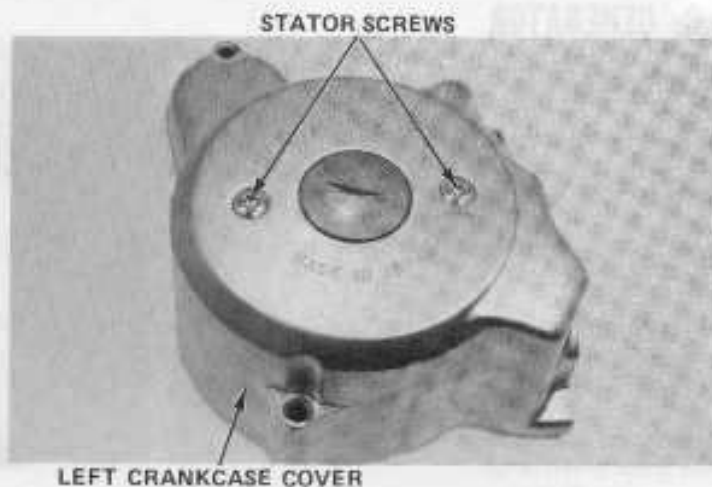


Use the flywheel holder or a band strap holder and secure the flywheel to prevent the crankshaft from turning.

Remove the generator rotor nut.

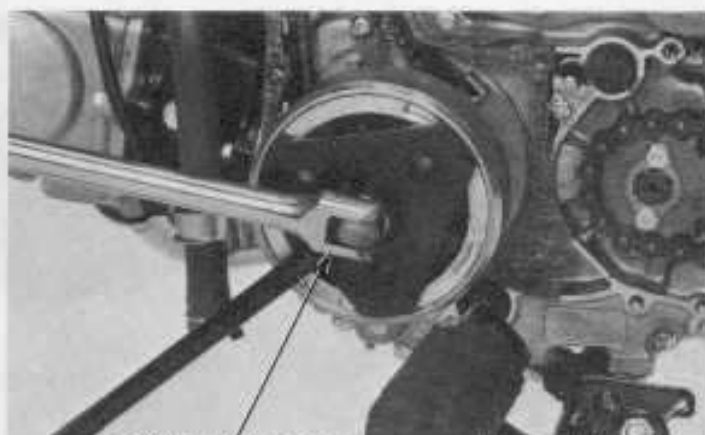

**FLYWHEEL HOLDER** or commercially available  
07925-GB40000 band strap holder

Remove the rotor.

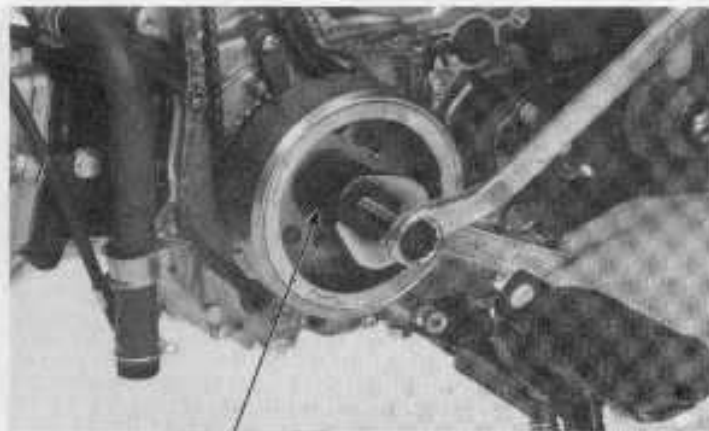

**ROTOR PULLER**  
07933-4300000