



13. ELECTRIC STARTER

STARTER MOTOR

REMOVAL

Remove the starter drive sprocket snap ring (page 16-2).

Disconnect the starter cable at the motor terminal.

Remove the starter motor mounting bolts and remove the motor.

