



TOOL NO.	DESCRIPTIONS
① 07022-20001	Drive sprocket holder
② 07024-01101	Clutch outer holder
③ 07086-03001	T-handle box wrench, 16 mm
④ 07046-21601	Valve guide driver
⑤ 07047-04001	Valve guide remover
⑥ 07046-02801	Valve guide driver
⑦ 07008-00101	Valve guide reamer
⑧ 07031-20001	Valve lifter
⑨ 07081-00101	Tappet adjusting wrench
⑩ 07087-00101	Tappet lock nut socket wrench
⑪ 07024-03401	Clutch outer holder
⑫ 07007-02801	Valve seat cutter holder
⑬ 07003-02801	Inlet valve flat surface seat cutter
⑭ 07004-02801	Exhaust valve flat surface seat cutter
⑮ 07001-02801	Valve seat cutter, 90 degree
⑯ 07005-02801	Inlet valve interior seat cutter
⑰ 07006-02801	Exhaust valve interior seat cutter
⑱ 07032-03301	Piston ring compressor
⑲ 07057-03301	Oil seal guide
㉑ 07038-03301	Clutch disassembling & assembling tool
㉒ 07011-20001	Dynamo rotor puller
㉓ 07033-03301	Piston base
㉔ 07061-02801	Timing inspection cover