

Fig. 4.2 Removing brake adjusting nut
① Brake adjusting nut ② Brake arm

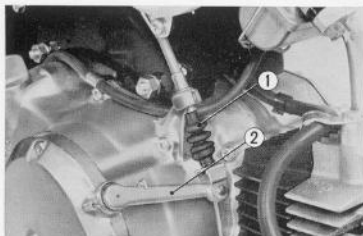


Fig. 4.3 Disconnecting the clutch cable
① Clutch cable ② Clutch lever

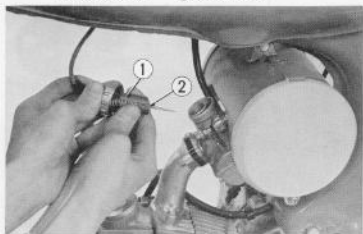


Fig. 4.4 Removing throttle cable from carburetor
① Throttle valve ② Cable end

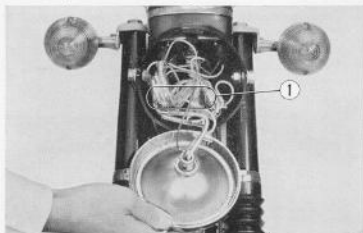


Fig. 4.5 Disconnecting electrical leads
① Electrical leads

B. Disassembly

(S 90, CL 90, CL 90 L)

1. Hold the front brake arm ② back and unscrew the adjusting nut. ① (Fig. 4.2)

2. Disconnect the clutch cable ① lower end from the clutch lever ②. (Fig. 4.3)

CAUTION:

- a. Exercise care not to damage the cylinder and cylinder head fins when removing the cable.
- b. The task can be simplified by loosening the adjusting screw at the handle lever end and disconnecting the cable.

3. Disconnect the throttle cable at the throttle valve ① by unscrewing the carburetor cap, pulling out the throttle valve and then unhooking the throttle cable ②. (Fig. 4.4)

4. Remove the horn, turn signal and dimmer switch lead ① by loosening the screws at the front of the headlight case, and disconnecting the connectors within the headlight case. (Fig. 4.5)