

5. Remove the four hex bolts mounting the handle pipe between the upper and lower holders and remove the steering handle ① together with the control cables. (Fig. 4.6)

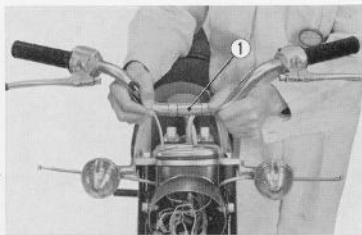


Fig. 4.6 Removing handle pipe ① Handle pipe

6. The fork top bridge ④ is removed together with the turn signal lights by removing the front fork bolts ③ and the steering stem nut ②. (Fig. 4.7)

Use stem nut socket wrench ① (Tool No. 07083-03001) to loosen the stem nut.

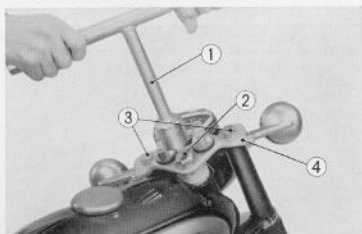


Fig. 4.7 Removing the top bridge plate
① Stem nut socket wrench ② Stem nut
③ Front fork bolt ④ Fork top bridge

7. In order to remove the clutch and brake cables from the handle lever, loosen the cable adjusting bolts ②, align the lock nut ① to the groove and separate from the handle lever. Remove the cable end from the lever. (Fig. 4.8)

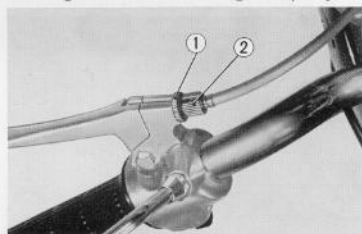


Fig. 4.8 Removing brake and clutch cables
① Lock nut ② Cable adjuster

8. Remove the two 5 mm screws to separate the right handle grip bracket, turn signal switch assembly, throttle grip pipe and then disconnect the throttle cable ① from the throttle cable hinge ②. (Fig. 4.9)

9. Remove the hex stem nut to disassemble the handle pipe lower holder, handle cushion upper and lower rubbers and handle cushion seat from the top bridge plate.

NOTE:

When removing the handle pipe lower holder from the top bridge, loosen the 10 mm hex nut before removing the handle. This will prevent the holder and nut from turning and facilitates removal.

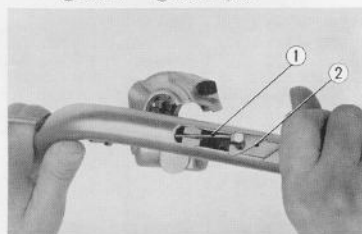


Fig. 4.9 Removing throttle cable
① Throttle cable ② Throttle cable hinge