



Fig. 4.25 Removing headlight ① 8×22 hex bolt

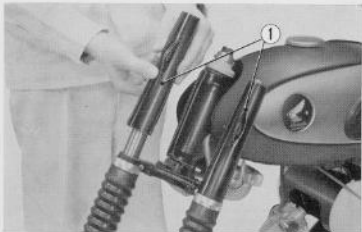


Fig. 4.26 Removing front fork cover ① Front fork cover

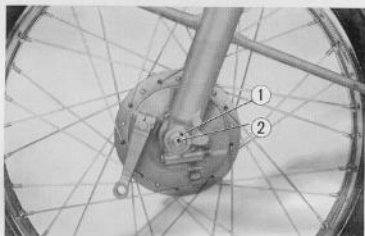


Fig. 4.27 Removing front wheel
① Front wheel axle nut ② Front wheel axle

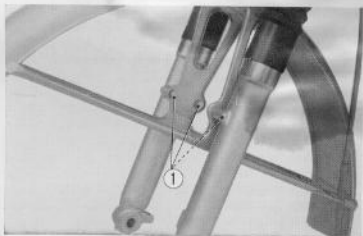


Fig. 4.28 Removing front fender ① 6 mm setting bolt

B. Disassembly

(S 90, CL 90, CL 90 L)

1. Disassemble the steering handle in accordance with 4.1.B.
2. Remove the speedometer cable cap from the front brake panel, remove the two 8×22 hex bolts ① from both sides of the headlight and remove the headlight body. (Fig. 4.25)
3. Remove the left and right front fork covers ①. (Fig. 4.26)
4. Place an adequate stand below the engine to raise the front wheel. Remove the front wheel axle nut ① and pull out the front axle ②. Then, the front wheel will drop away. (Fig. 4.27)
5. Remove the front fender by removing 2 hex bolts ① from each side. (Fig. 4.28)