

4. Inspect dust seal, bushings and shafts for wear and damage; replace as necessary.

D. Reassembly

Reassemble the front fork in the reverse order of disassembly.

(CT 90 Model From Frame No. 000001A)

After reassembly of the front fork on CT 90, fill with 130~140 cc (8.0~8.6 cu.in.) of good grade SAE 10W-30 oil from the front fork bolt hole.

4.4 FUEL TANK

A. Construction

The fuel tank ① is mounted on the frame and ahead of the seat on the S90, CL90, CL90L and CD90. On the C90 and CT90, it is located below the seat and is the structure on which the seat is mounted. (Fig. 4.39 A, B)

B. Disassembly

(S 90, CL 90, CL 90 L, CD 90)

1. Turn off the fuel cock ① at the bottom of the tank and disconnect the fuel line. (Fig. 4.40)
2. Remove the seat setting nuts ① and remove the seat ②. (Fig. 4.41)



Fig. 4.39 A Fuel tank (CT 90) ① Fuel tank



Fig. 4.39 B Fuel tank (CL 90) ① Fuel tank

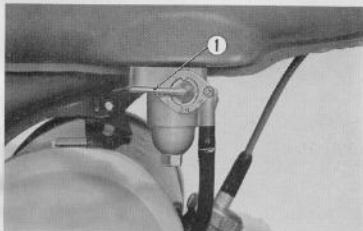


Fig. 4.40 Turn off the fuel cock ① Fuel cock

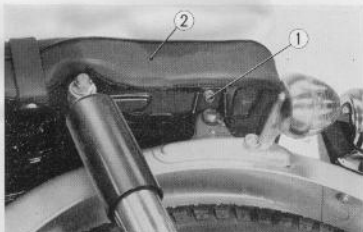


Fig. 4.41 Removing seat setting nuts
① Seat setting nut ② Seat