

- Remove the seat ① by pulling up and back toward the rear. (Fig. 4.51)

(CD 90)

- Loosen the upper rear cushion mounting cap nuts ① from the right and left side. (Fig. 4.52)
- Remove the seat by pulling up and back toward the rear.

(CT 90, C 90)

Raise the seat ① and detach the seat at the hinge by removing the seat hinge pin. ② (Fig. 4.53)

C. Inspection

- Check the seat covering for tears, broken seams or other damages.
- Clean the covering with soap and water. Do not use any harsh chemical as it will deteriorate the covering.

D. Reassembly

- Assemble the seat in the reverse procedure of disassembly described in section 4.6 B.
- The tool box ① for the S 90, CL 90 and CL 90 L is attached to the bottom, right side of the seat. Tighten the wing lock nut to prevent loss. (Fig. 4.54)

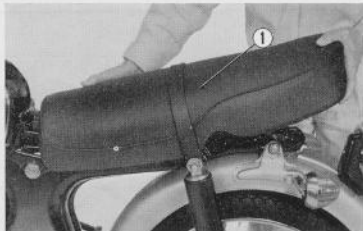


Fig. 4.51 Removing seat ① Seat

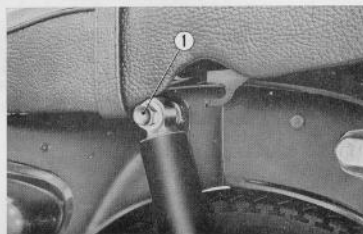


Fig. 4.52 Loosen upper rear cushion cap nuts
① Rear cushion cap nut



Fig. 4.53 Removing seat hinge pin
① Seat ② Seat hinge pin

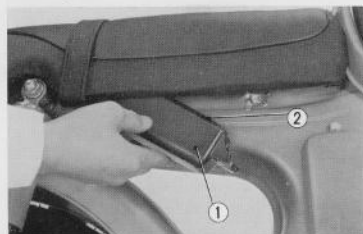


Fig. 4.54 Tool box ① Tool box ② Tool kit