

- (2) By removing the adjusting nut at the front wheel, the front brake cable ① can be removed from the front brake arm joint. (Fig. 4.57)

- (3) Front brake panel
(S 90, CL 90, CL 90 L)

Remove the front brake cable ① and the speedometer cable ② from the front brake panel. Remove the axle nut ③ and pull out the axle ④, then the front brake panel can be removed together with the front wheel. (Fig. 4.57)

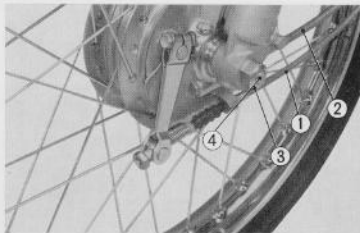


Fig. 4.57 Removing front brake cable

- ① Front brake cable
② Speedometer cable
③ Axle nut
④ Front wheel axle

(CD 90, C 90, CT 90)

- (4) Disconnect the speedometer cable ① and front brake cable ②, remove the castle nut ④ and pull out the panel stopper bolt ⑤. Then loosen the two 8 mm hex bolts ⑥, at the suspension arm, and remove the axle nut and pull out the axle ③.

The front wheel will drop out from the front fork. (Fig. 4.58)

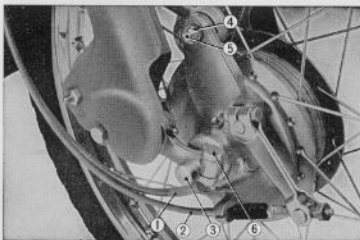


Fig. 4.58 Removing front brake cable

- ① Speedometer cable
② Brake cable
③ Front axle
④ Castle nut
⑤ Panel stopper bolt
⑥ 8 mm-hex bolt

- (5) The front brake shoes ① shall be removed from the panel ② by spreading the shoes against the brake shoes spring pressure and pulling out. (Fig. 4.59)

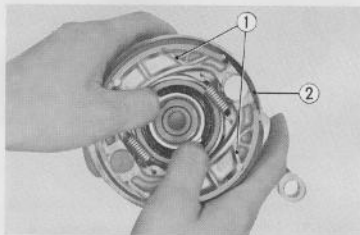


Fig. 4.59 Removing front brake shoes

- ① Front brake shoes
② Front brake panel