

(CD 90)

Remove the air cleaner case cover ① mounted on the right side at the center of the frame. The air cleaner element may be removed by unscrewing the attaching screw ③. (Fig. 4.69)

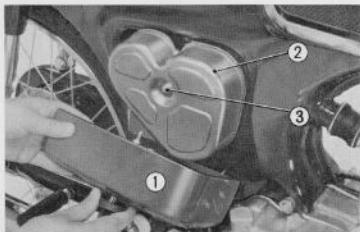


Fig. 4.69 Removing air cleaner (CD 90)

- ① Air cleaner cover
- ② Air cleaner case
- ③ Attaching screw

(C 90, CT 90)

Unscrew the cap nut ①, remove the cover ② and pull out the cleaner element. (Fig. 4.70)

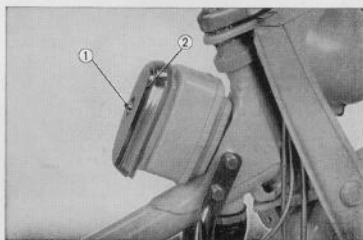


Fig. 4.70 Removing air cleaner (C 90, CT 90)

- ① Cap nut
- ② Air cleaner cover

C. Inspection

1. Replace any element which is deformed or damaged.
2. Clean the element ① by first tapping lightly to loosen the dust and then blow off the dust by applying dry compressed air from the inside. (Fig. 4.71)

CAUTION

All loose dust must be removed completely or else the dust will be taken into the cylinder and cause wear.

D. Reassembly

Perform the reassembly in the reverse order of disassembly.

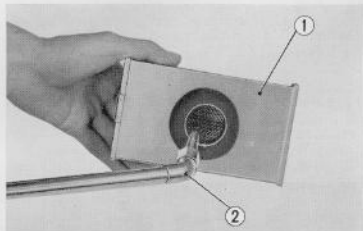


Fig. 4.71 Cleaning air cleaner

- ① Air cleaner element
- ② Air gun